

Centurion Ri

2025 Display User Manual



Table of Contents


Configuration	3
Right Display	3
Home Screen.....	3
Tab Controls.....	4
Gauges.....	5
Top Buttons.....	6
Ballasts Screen.....	7
Ballast Controls.....	8
Trailer Mode.....	10
Ramfill Ballasts.....	11
Switching Screen.....	11
RGBW Outputs.....	12
Switching Outputs.....	14
Audio Screen.....	14
Auto Volume.....	14
Source Selection.....	14
Favorites.....	15
Zone.....	15
Bluetooth Manager.....	16
Surf Screen.....	17
Tab Controls.....	17
Save/Save As.....	20
Maps Screen.....	24
Map Controls.....	24
Waypoints.....	28
Add a Waypoint.....	28
Tracks.....	29
Add a Track.....	30
Popup.....	31
Waypoints.....	31
Tracks.....	31
Profile Popup.....	32
Create New.....	32
Edit Profile.....	37
Go Home Mode.....	37
Activate/Deactivate Profile.....	37
Menu.....	38
Factory Reset.....	38

Reboot to Loader.....	40
Dealer Settings.....	41
Wake Feature: Ballast Fill and Drain Times.....	43
Wet Sounds Updater.....	44
Theme Color.....	45
Left Display.....	49
Home Screen.....	49
Tab Controls.....	49
Gauges.....	51
Top Buttons.....	54
Cruise.....	54
Show Trip Information.....	55
Audio Controls.....	56

Configuration

Right Display

Home Screen

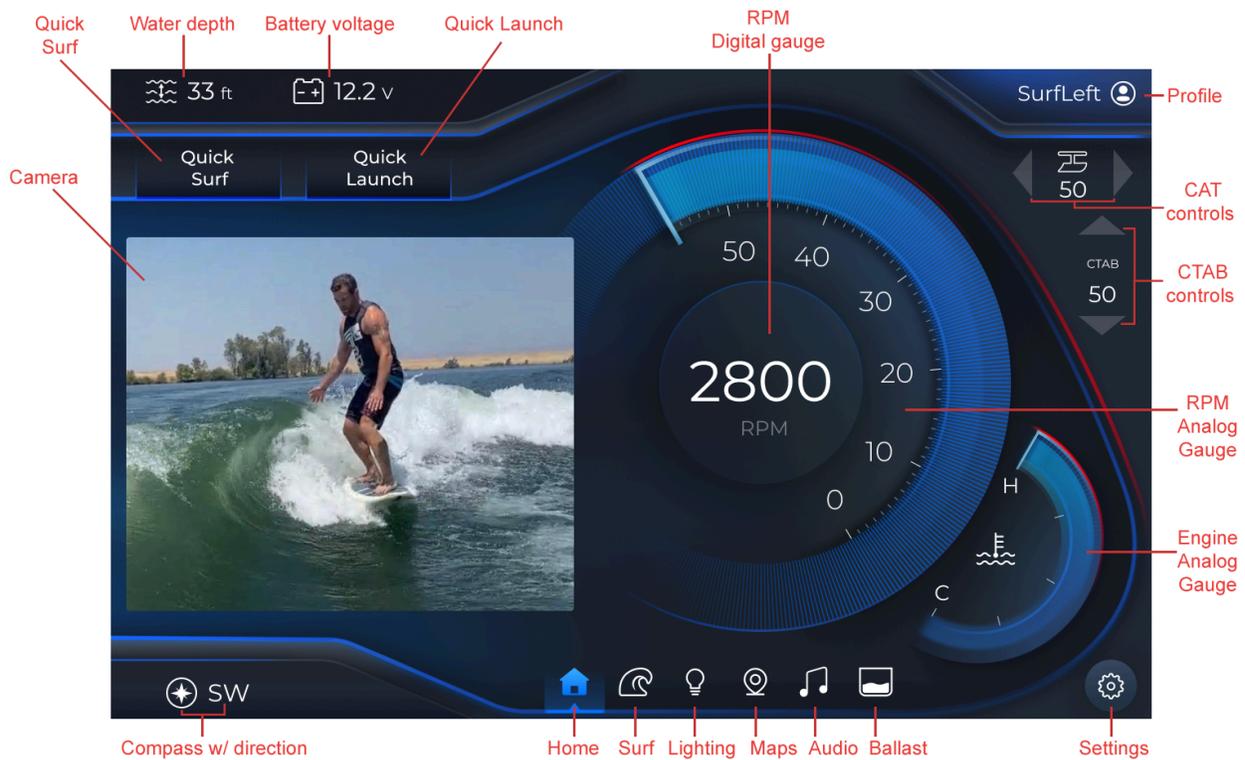



Note: In the bottom navigation pane, the corresponding information will display, when an icon is tapped.

Tab Controls

ICON	DESCRIPTION
 A dark blue vertical rectangular button. At the top is a light blue upward-pointing arrow. Below it, the text "CTAB" is centered. Below "CTAB", the number "50" is centered. At the bottom is a light blue downward-pointing arrow.	Tap the up or down arrows to adjust the Center Tab controls.
 A dark blue horizontal rectangular button. On the left is a light blue left-pointing arrow. In the center, there is a white icon of a hand holding a pen. Below the icon, the number "50" is centered. On the right is a light blue right-pointing arrow.	Tap the left or right arrows to adjust the CATS; ranging from -50 to +50.
 A circular icon with a light blue background and a white gear symbol in the center.	Tap to access system settings.



Gauges

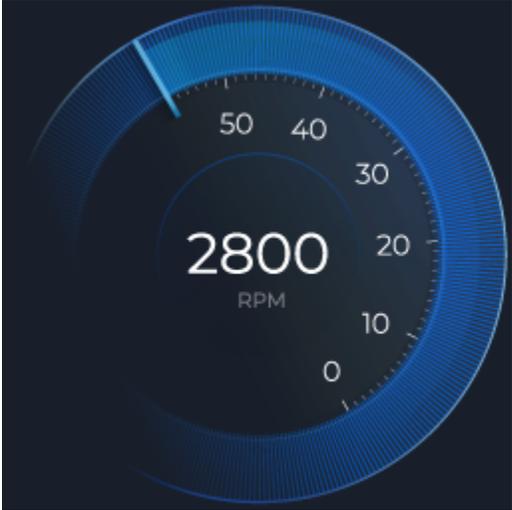ICON	DESCRIPTION
 An analog and digital RPM gauge. The gauge has a blue needle pointing to approximately 45 on a scale from 0 to 50. The digital display in the center shows '2800 RPM'.	Analog + digital RPM.
 An analog engine temperature gauge. The gauge has a blue needle pointing to the 'H' (Hot) end of a scale. The center of the gauge features a thermometer icon with wavy lines below it, and the letters 'C' (Cold) and 'H' (Hot) are positioned at the bottom and top respectively.	Analog engine temperature

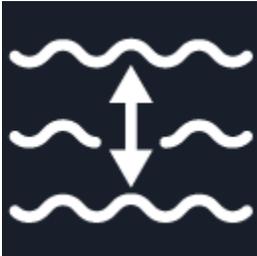	<p>Water temperature</p>
	<p>Water depth</p>
	<p>Battery voltage</p>
	<p>Compass</p>

Top Buttons

<p>ICON</p>	<p>DESCRIPTION</p>
--------------------	---------------------------

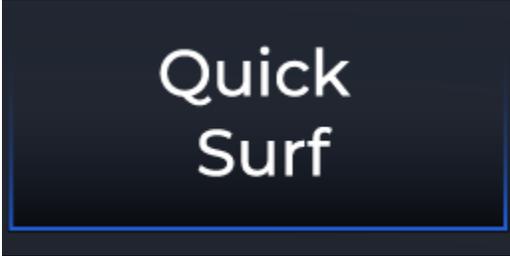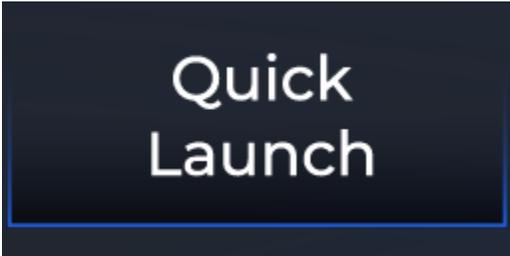	<p>The Profile feature displays all default and created profiles with the ability to add, edit, and remove.</p>
	<p>The Quick Surf feature automatically activates the Surf Right function, and applies an editable value for the P Tab Setpoint gauge (the port).</p>
	<p>The Quick Launch feature disables the Quick Surf function and only engages C tab</p>

Ballasts Screen


From the main right display, in the bottom navigation pane, tap the Ballast icon (6th symbol).




Ballast Controls

Buttons exclusively on the Ballast page are shown in the table below.

ICON	DESCRIPTION
	<p>To fill the respective ballast.</p>
	<p>To fill all the ballasts.</p>

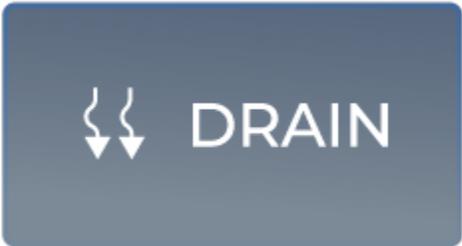	A real-time display of a ballast filling.
	To drain the respective ballast.
	To drain all the ballasts.
	A real-time display of a ballast draining.
	To halt the fill or drain of the respective ballast.

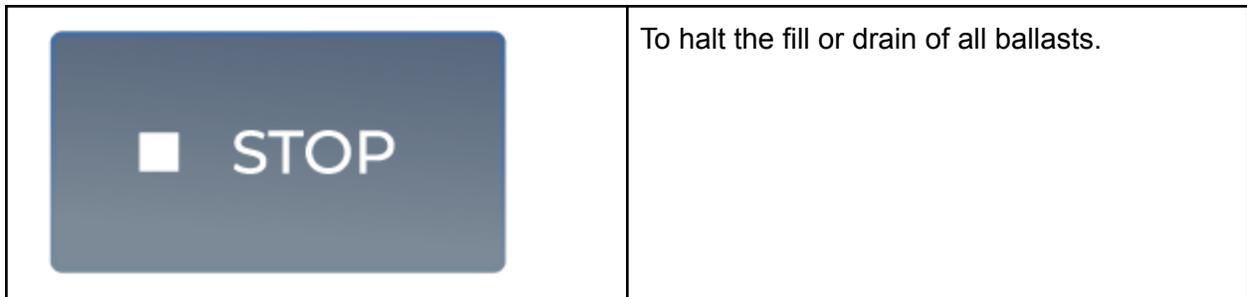


Trailer Mode



- From the Ballast page, tap Trailer Mode.
- The Trailer Mode pop-up dialog box displays open and close options to fill or drain the gates.
- Note: Under the Open and Close buttons in the Fill Gates and Drain Gates areas, a message displays if both gates are opened or closed.
- When finished, tap the Close icon.

Ramfill Ballasts

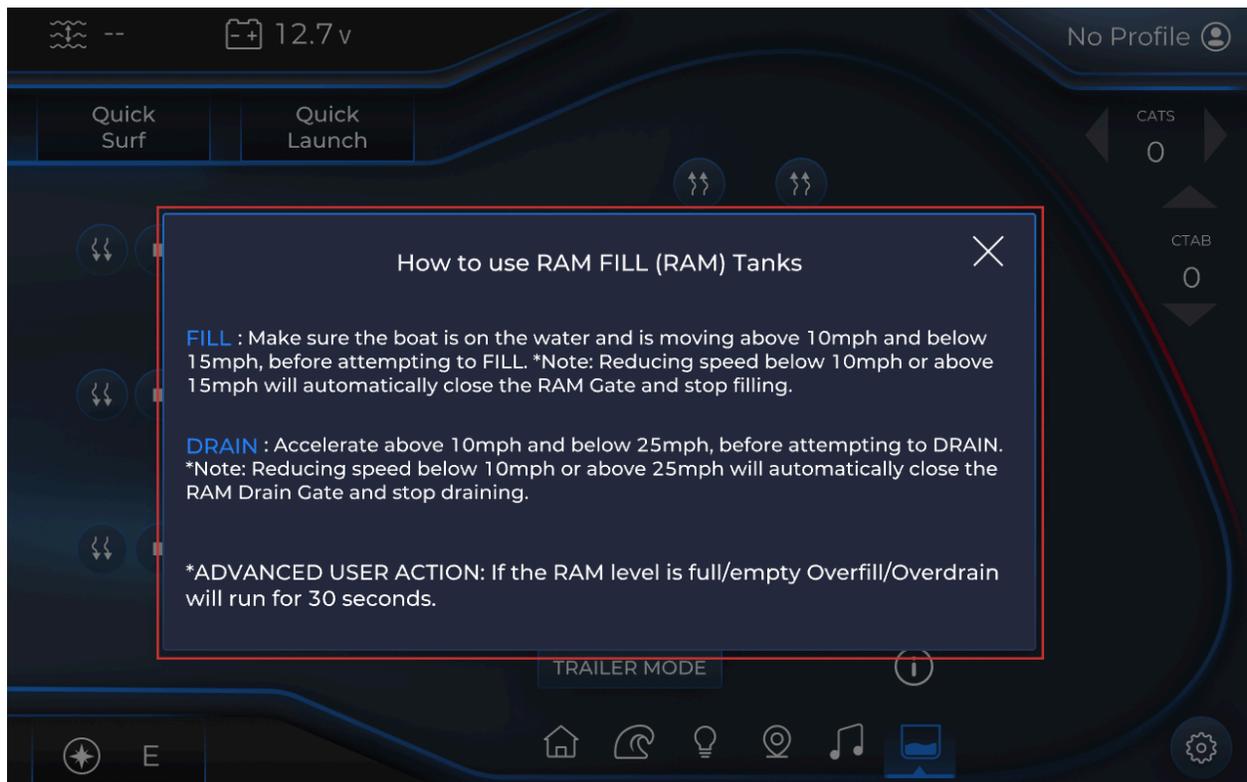

- Note: Adjacent to each ballast are 3 respective features: Drain, Stop, and Fill.
- To select a specific ballast, locate the appropriate ballast.
- Note: When either the drain or fill option is selected, a connector line will display.
- To drain the ballast, tap the Drain icon.
- Note: To halt the drain, tap the Stop icon.
- To fill the ballast, tap the Fill icon.
- Note: To halt the fill, tap the Stop icon.
- To simultaneously drain all the ballasts, locate the All area.
- Tap Fill.
 - Note: The Ramfill Fill Disabled pop-up dialog box will appear if the boat speed is not between 8-15 MPH.
- To simultaneously drain all the ballasts, tap Drain All.
 - Note: The Ramfill Drain Disabled pop-up dialog box will appear if the boat speed is not between 8-23 MPH.
- To halt, all ballasts from filling or draining, tap Stop.

Switching Screen


From the main right display, in the bottom navigation pane, tap the Lighting icon (3rd symbol).



RGBW Outputs



- Locate the appropriate RGBW output(s):
 - All RGBW (applying the same color for all outputs)
 - Tower Speakers
 - Interior Speakers
 - Interior
 - Underwater
- To activate/deactivate toggle on/off the RGBW output..
- Tap the corresponding vertical color bar.
- The respective RGBW Output Preset pop-up window will display.
- Locate the Presets area.
- Tap the appropriate color.
- To customize a preset color, tap Advanced.
- The Advanced pop-up window displays.

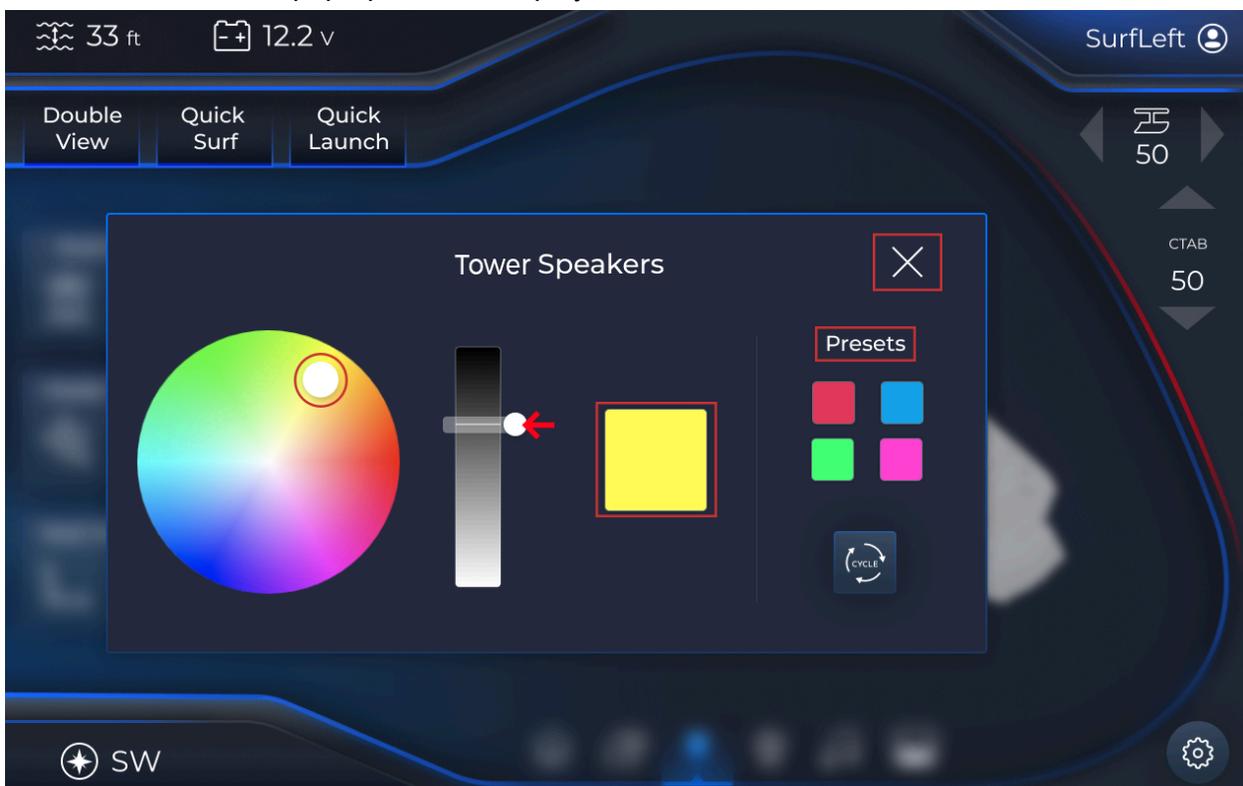


- To apply a custom color, simultaneously touch and slide the circle on the color wheel to the appropriate color.
- To adjust the brightness, simultaneously touch and slide the brightness slider to the appropriate setting.
- The color is reflected in the adjacent square.
- To save the customized color as a preset, locate the Presets area.
- Touch and hold the appropriate preset option.
- The selected preset is now updated.
- When finished, tap the Close icon.

Switching Outputs

- Locate the appropriate switching output(s):
 - Docking
 - Heater Fan
 - Seat Heater
 - Exterior
- To activate/deactivate toggle on/off the appropriate options.

Audio Screen

From the main right display, in the bottom navigation pane, tap the Audio icon (5th symbol).

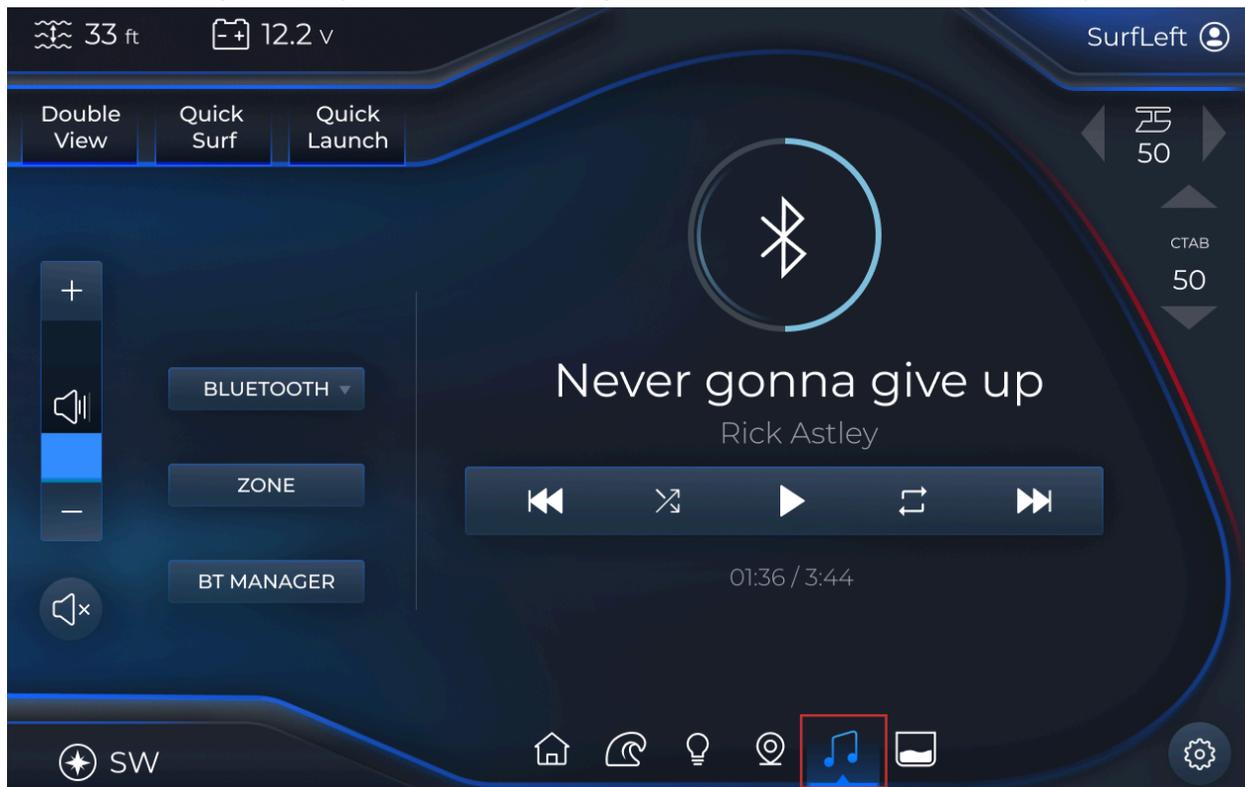

Auto Volume

- Note: The Auto Volume feature will adjust the decibel based on the vehicle's RPM.
- To activate the decibel automatically adapting, tap Auto Volume.
- The Auto Volume button is now highlighted.
- To set the volume at a constant decibel, re-tap Auto Volume.
- The Auto Volume button is now unhighlighted.

Source Selection

- Note: The active option displays on the Source Selection drop-down button.

- Additionally, the respective controls are right-adjacent.
- Tap the Source Selection drop-down.
- 5 options are displayed:
 - FM Radio, AM Radio
 - Controls:
 - Seek
 - Tune
 - Favorite
 - WX Radio
 - Controls:
 - Seek
 - Tune
 - AUX
 - Control:
 - AUX Connected
 - Bluetooth
 - Controls:
 - Shuffle
 - Loop
 - Pause
 - Forward
 - Back
 - Song name
 - Song timeline
- Tap the appropriate option.
- The selected option and its corresponding controls are now displayed.

Favorites


- Note: The Favorite feature is only available for the FM and AM radio options.
- Note: A maximum of 5 favorites are provided.
- Tap the Source Selection drop-down.
- Locate and tap the appropriate option.
- In the right-adjacent area, locate the corresponding options.
- Navigate to the desired radio station.
- Note: If less than 5 favorites are displayed, tap the Favorite icon.
- The selected favorite is now displayed.
- Note: If 5 favorites are populated, locate the appropriate favorite to override.
- Touch and hold on the appropriate favorite.
- The favorite is now updated to the current radio station.

Zone

- The Zone feature provides the ability to manually change the volume of a specific area:
 - Downfire

- Tower
- Sub
- Interior
- Tap Zone.
- 4 tabs are displayed: Downfire, Tower, Sub, Interior.
- Tap the appropriate tab.
- The corresponding volume controls are displayed.
- Tap the negative icon to decrease the volume.
- Tap the positive icon to increase the volume.
- (Un)tap the Speaker icon to (un)mute the sound.
- When finished, tap Done.

Bluetooth Manager


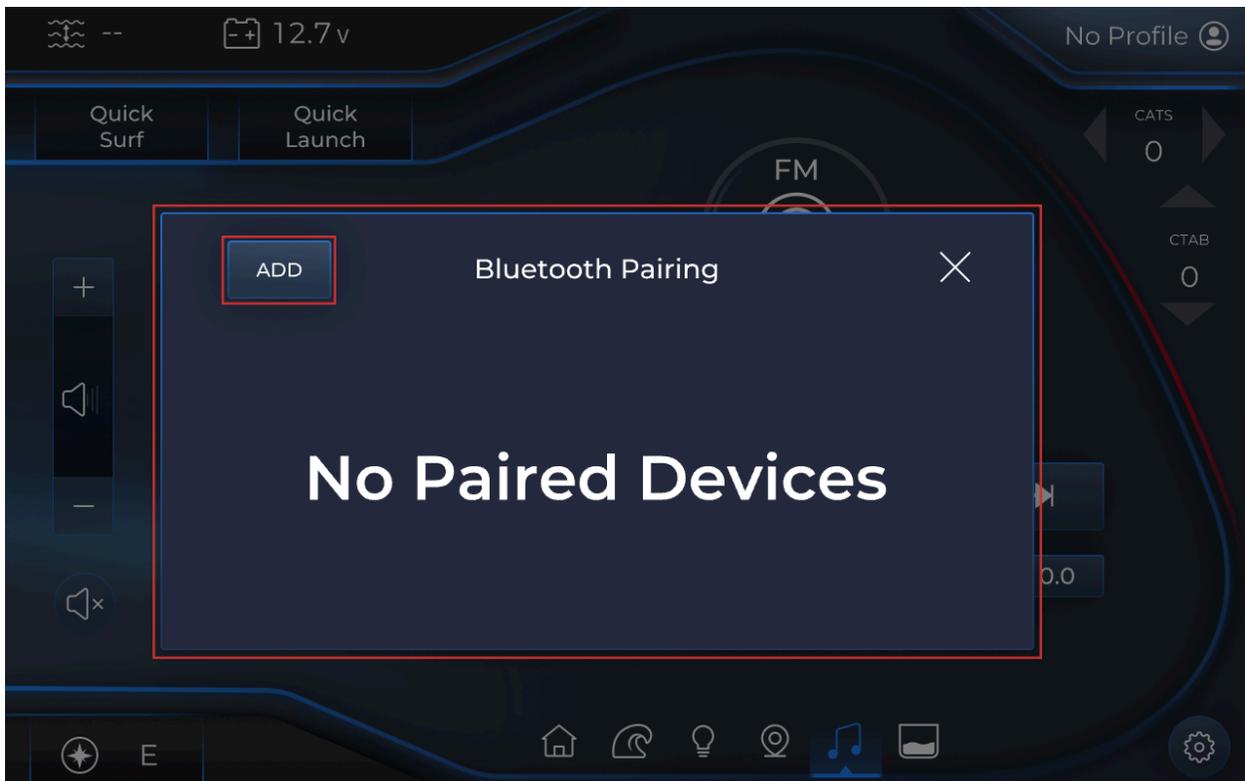



- Tap BT Manager.
- In the Bluetooth Pairing pop-up window, tap Add.
- Activate the appropriate bluetooth device.
- Locate and tap the appropriate pairing device.
- Tap OK.
- The connected bluetooth device is now displayed.
- To exit the Bluetooth Pairing pop-up window, tap the Close icon.

Surf Screen


Buttons on the Surf Screen page are shown in the table below.

Tab Controls

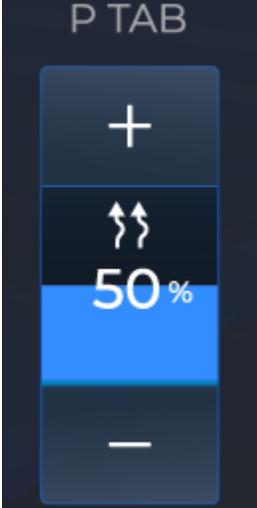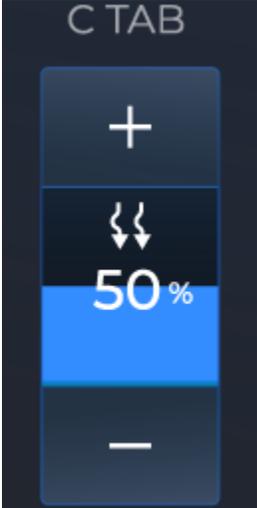
ICON	DESCRIPTION
	<p>The P Tab Setpoint (Port) allows for setting the value (up and down arrows) of the left side of the vessel when facing the bow, or front, of the boat. Note: this feature is only available if the Surf Right or Quicksurf button is tapped.</p>
	<p>The C Tab Setpoint (Center) allows for setting the value (up and down arrows) of the center of the vessel. When speed reaches 20 MPH, C tab goes to 50%, when speed reaches 25+ mph C tab goes to 20%.</p>

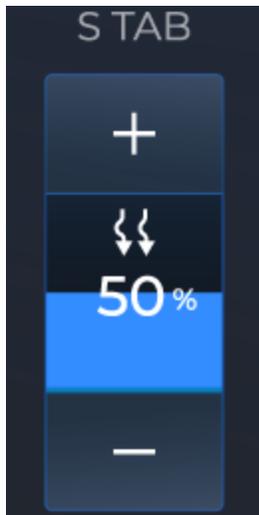

The S Tab Setpoint (starboard) allows for setting the value (up and down arrows) of the right side when facing the bow, or front, of the ship. **Note: this feature is only available if the Surf Left button is tapped.**

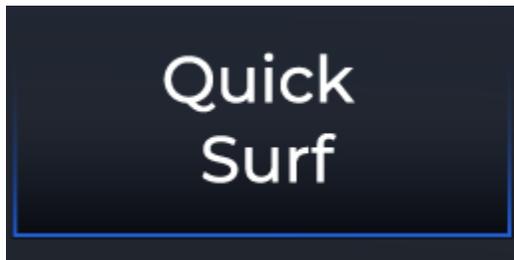

The Quick Surf feature automatically activates the Surf Right function, and applies an editable value for the P Tab Setpoint gauge (the port).

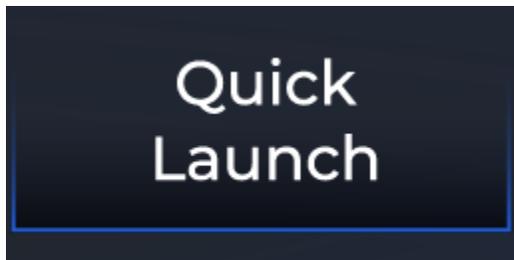

The Quick Launch feature disables the Quick Surf function and only engages C tab



Surf Right shifts the boat on the right and enables the P Tab Setpoint (Port) C Tab Setpoint (Center) options.


 <p>A vertical, rounded rectangular button with a dark blue background. At the top, the word "SURF" is written in white, uppercase letters. Below it is a white icon of a wave crest. At the bottom, the word "LEFT" is written in white, uppercase letters.</p>	<p>Surf Left shifts the boat on the left and enables the C Tab Setpoint (Center) and S Tab Setpoint (starboard) options.</p>
 <p>A horizontal, rounded rectangular button with a dark blue background and the text "SAVE AS" in white, uppercase letters.</p>	<p>The Save As button saves all applied settings into a profile. This profile becomes a template that can be reused.</p>
 <p>A horizontal, rounded rectangular button with a dark blue background and the text "SAVE" in white, uppercase letters.</p>	<p>The Save button saves the applied settings into a pre-existing profile, which can be selected in the Save Settings pop-up dialog box.</p>

From the main right display, in the bottom navigation pane, tap the Surf icon (2nd symbol).



Save/Save As

- Set the appropriate options.
- To save the applied tab settings, tap Save.

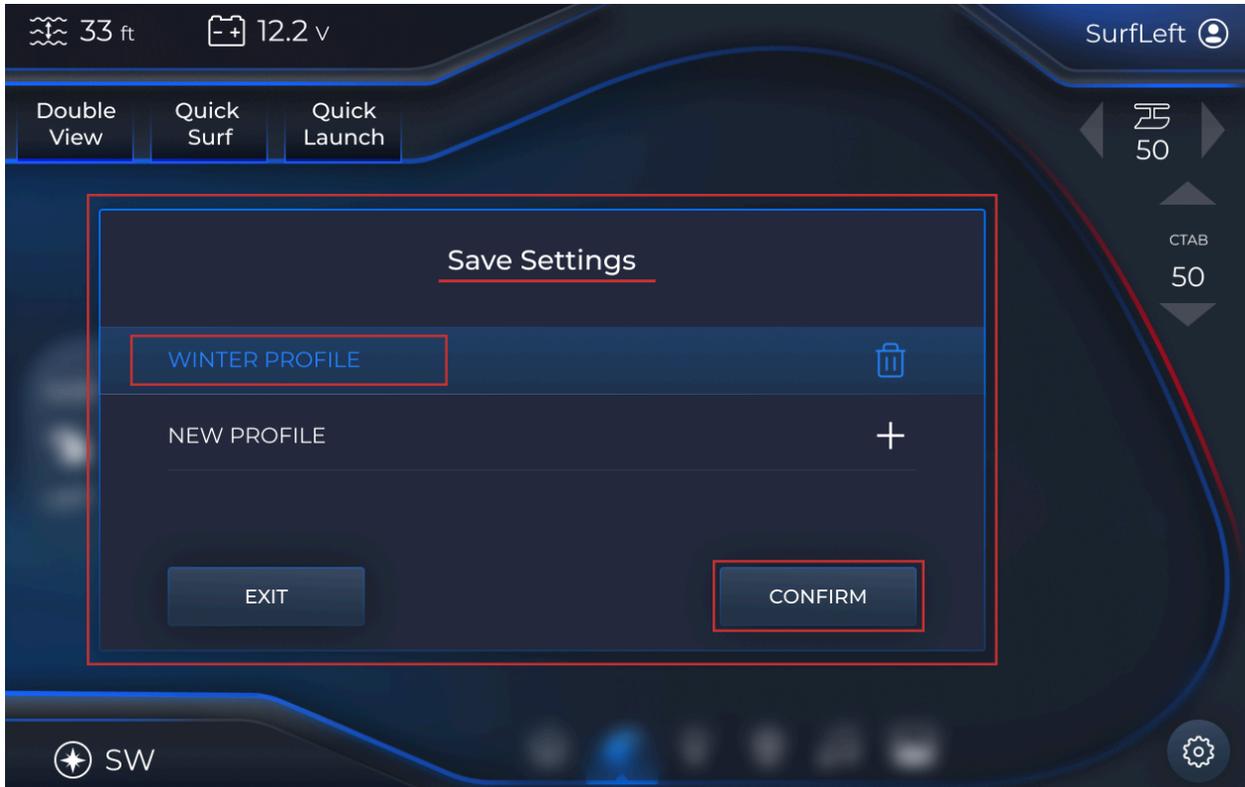

- In the Save Settings pop-up dialog box, locate and tap the appropriate profile.
- To apply, tap Confirm.
- Alternatively, to save the applied tab settings to a new profile, tap Save As.



- In the pop-up dialog box, enter the appropriate profile name.
- Tap the Enter (the checkmark) icon.



- The profile is now automatically displayed (and activated) in the top-right corner of the main right display.
- To view the profile, tap the profile.



- The Profile pop-up window is displayed and lists all the applied settings.
- Note: To gain a step-by-step understanding of how to edit the settings, please refer to the [Profile Popup](#) section.
- When finished, tap the Close icon.


Maps Screen

Map Controls

Buttons exclusively on the Map page and pop-up window are shown in the table below:

ICON	DESCRIPTION
	To zoom in the map.
	To zoom out the map.
	This icon indicates Pan mode. Tap to cycle between centering the map with a north up direction, centering the map with a forward up direction, or Pan mode.
	This icon indicates centered Map mode. Tap to cycle between centering the map with a north up direction, centering the map with a forward up direction, or Pan mode.


	To add a waypoint.
	To add a track.
	To display a list of the waypoints and tracks
	To orient to the assigned waypoint.
	To edit the waypoint/track name.

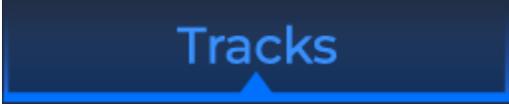	To delete the selected waypoint/track.
	To toggle waypoint/track visibility on/off.
	The Waypoints tab in the pop-up window.
	The Tracks tab in the pop-up window.

From the main right display, in the bottom navigation pane, tap the Map icon (4th symbol).



Waypoints

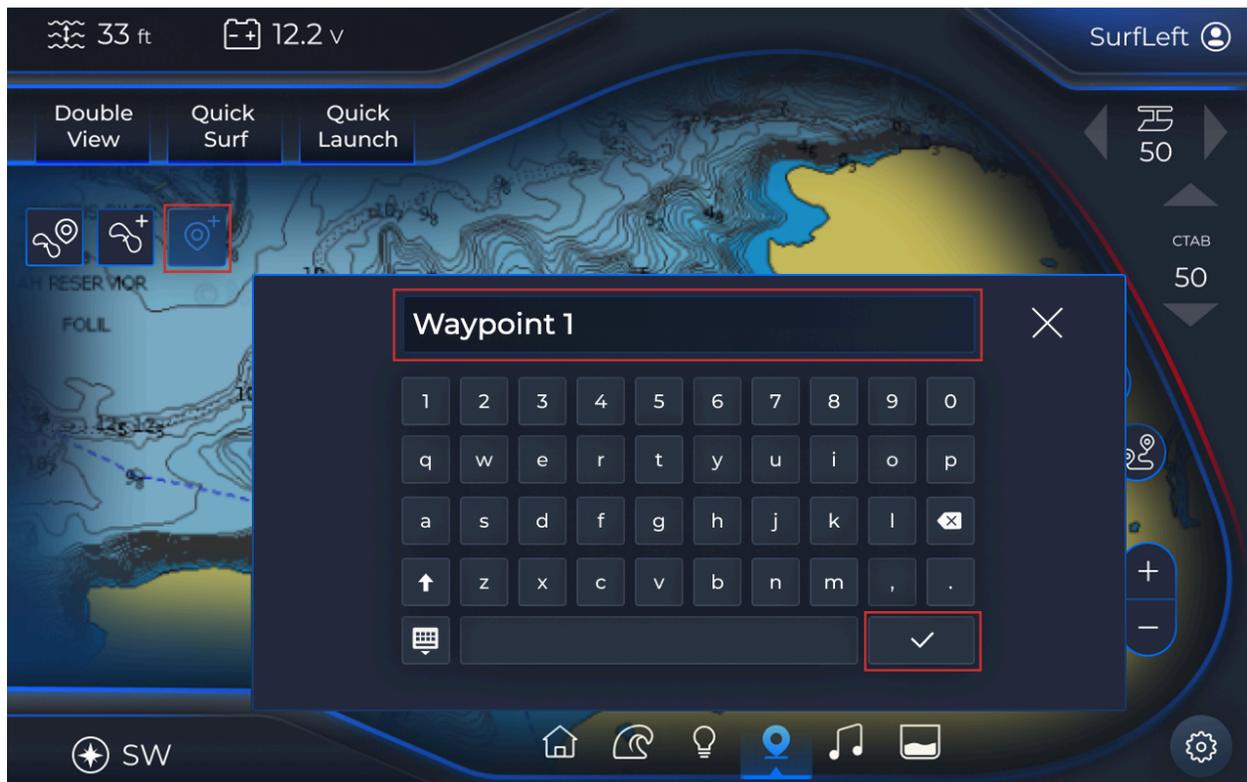


Add a Waypoint

- From the Map page, locate the left-hand area.
- Tap the Waypoint icon.
- In the pop-up dialog box, enter the appropriate information.
- When finished, tap the Enter (checkmark) icon.
- The waypoint is now displayed on the Map page.



Tracks

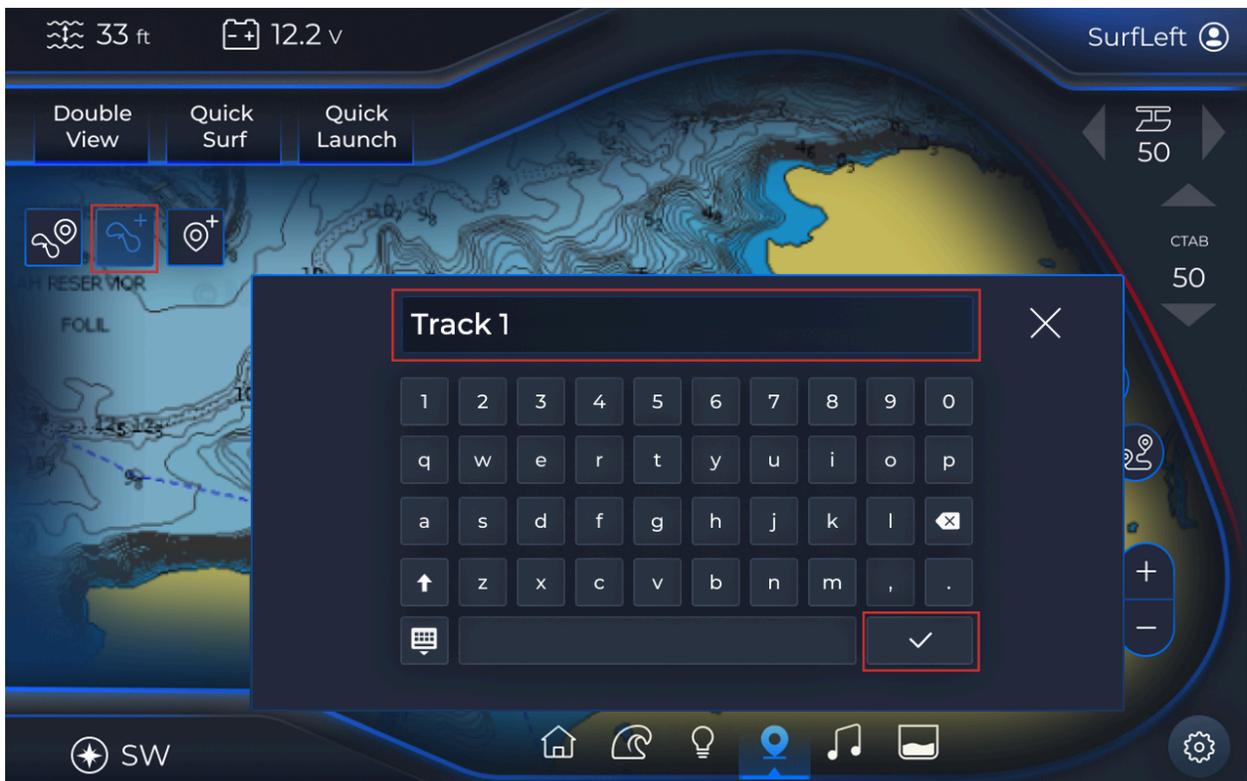


Add a Track

- From the Map page, locate the left-hand area.
- Tap the Track icon.
- In the pop-up dialog box, enter the appropriate information.
- When finished, tap the Enter (checkmark) icon.
- The track is now added.



Popup

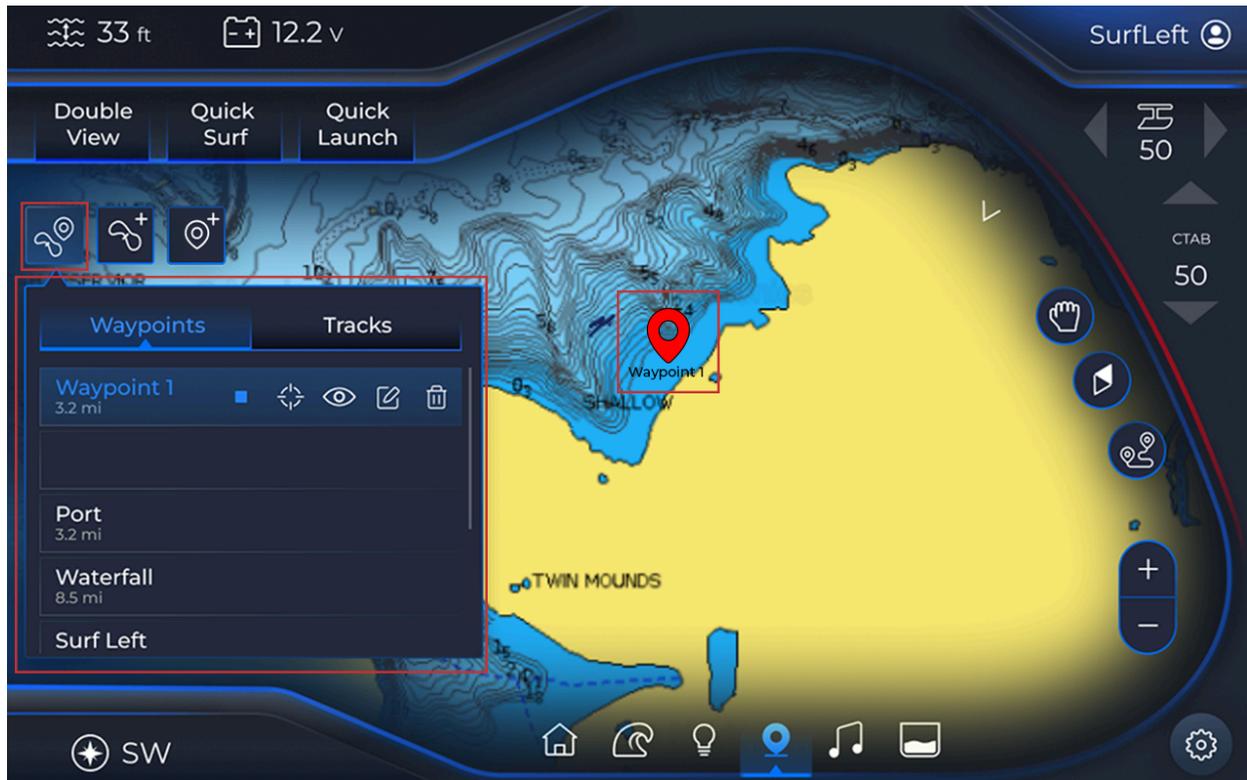

Waypoints

- From the Map page, locate the left-hand area.
- Tap the Waypoint and Track List icon.
- The pop-up window is displayed on the Map page.
- Note: In the pop-up window, there are 2 tabs: Waypoints & Tracks.
- Tap the Waypoints tab.
- The listed waypoints are displayed.
- Each waypoint has 4 corresponding options:
 - Orient to the waypoint (1st icon).
 - Navigate to the waypoint (2nd icon).
 - Rename the waypoint (3rd icon).
 - Delete the waypoint (4th icon).
- Set the appropriate options for the selected waypoint.
- When finished, tap the Close icon.

Tracks

- From the Map page, locate the left-hand area.
- Tap the Waypoint and Track List icon.
- The pop-up window is displayed on the Map page.
- Note: In the pop-up window, there are 2 tabs: Waypoints & Tracks.

- Tap the Tracks tab.
- The listed tracks are displayed.
- Each track has 3 corresponding options:
 - Toggle the visibility on/off (1st icon).
 - Rename the track (2nd icon).
 - Delete the track (3rd icon).
- Apply the appropriate settings for the selected track.
- When finished, tap the Close icon.

Profile Popup

From the main right display, in the top right-hand corner, tap the Profile icon.



Create New


- Note: In the Profile pop-up window, there are 3 default profiles:
 - Wakeboard
 - Pro Surf Left
 - Pro Surf Right
- To create a new profile, tap Add.



- The Profile list displays 12 field options:
 - Name
 - Quick Surf
 - Surf Tab
 - Center Tab
 - Set Speed
 - Center
 - STBD RAM
 - PORT RAM
 - BOW PNP
 - TRANSOM PNP
 - STBD PNP
 - PORT PNP
- Note: The fields are automatically populated with default values.
- Tap Name.



- In the pop-up dialog box, enter the appropriate information.
- Tap the Enter (checkmark) icon.

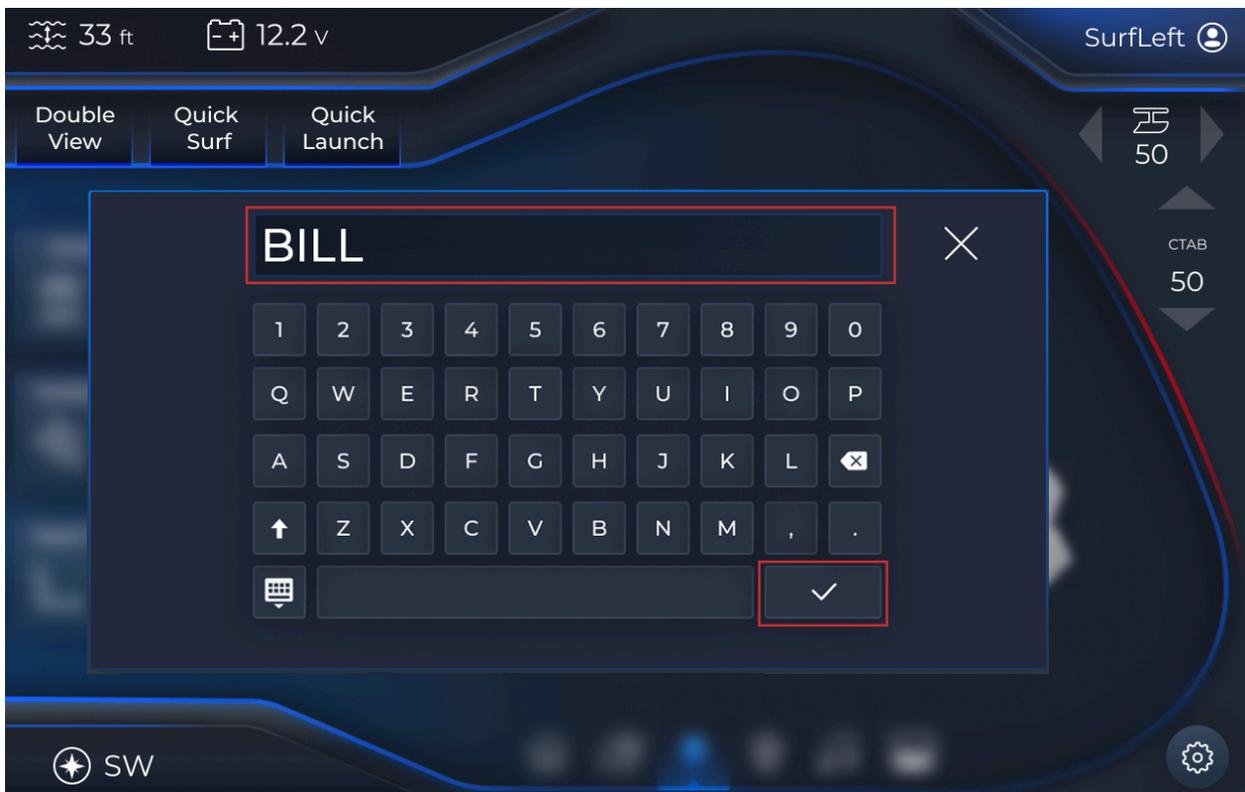

- The entered name is now displayed.

- Locate Quick Surf.
- Tap the respective setting until the desired option is displayed.
- Note: The available options will cycle.



- Locate Surf Tab.
- Tap the corresponding value and locate the left-adjacent window.

- Enter the appropriate value and tap the Enter (checkmark) icon.



- Note: The field is now updated with the corresponding data.



- To alter other settings in the Profile list, repeat the process.

Edit Profile

- Note: The default profiles are uneditable.
- Locate and tap the appropriate profile.
- Tap Edit.
- Note: To change the quick surf value, continuously tap the corresponding option to cycle through the features. All other field options require an entered value.
- Note: To edit a name, a pop-up dialog box will display.
- In the Profile list, tap the appropriate option.
- Locate the left-adjacent window and enter the appropriate value.
- Enter the appropriate value and tap the Enter (checkmark) icon.
- The new value is now displayed in the corresponding field.
- To alter other settings in the Profile list, repeat the process.
- When finished, locate the right-hand side of the Profile pop-up window.
- Tap the Enter (checkmark) icon.
- The edits are now saved for the selected profile.


Go Home Mode

- Note: When the Go Home feature is selected, all ballasts will drain and cruise control will automatically set to 22 MPH.
- Tap Go Home.
- The option is now activated.

Activate/Deactivate Profile

- Locate and tap the appropriate profile.
- The Profile list displays the profile's information.
- Tap Activate.
- The profile is now activated.
- To deactivate the profile, tap Deactivate.

Menu

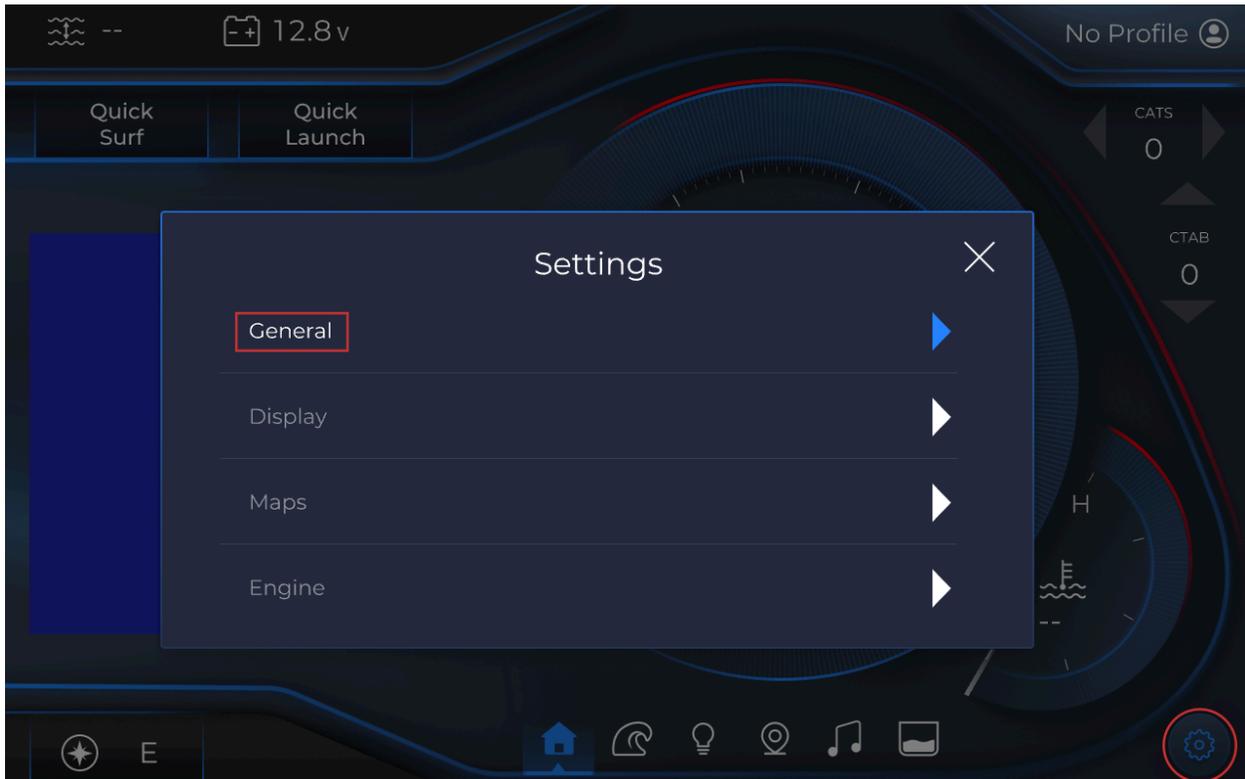

Factory Reset

- From the main right display, in the bottom right-hand corner, tap the Settings icon.
- In the Settings pop-up window, tap General.
- Simultaneously touch and scroll up to locate the Factory Reset option.
- Tap Factory Reset.



- In the Factory Reset pop-up dialog box, tap Confirm.
- Note: A proceeding Factory Reset pop-up dialog box will appear with the message “Factory reset in progress – display will reboot”.
 - To immediately close, tap OK; If no action is performed the window will eventually disappear.




Reboot to Loader




- Note: This is a rescue-mode restart feature; switches the display into reboot mode; permits loading information onto the USB drive and to re-install software.
- From the main right display, in the bottom right-hand corner, tap the Settings icon.
- In the Settings pop-up window, tap General.
- Tap Reboot to Loader.

Dealer Settings

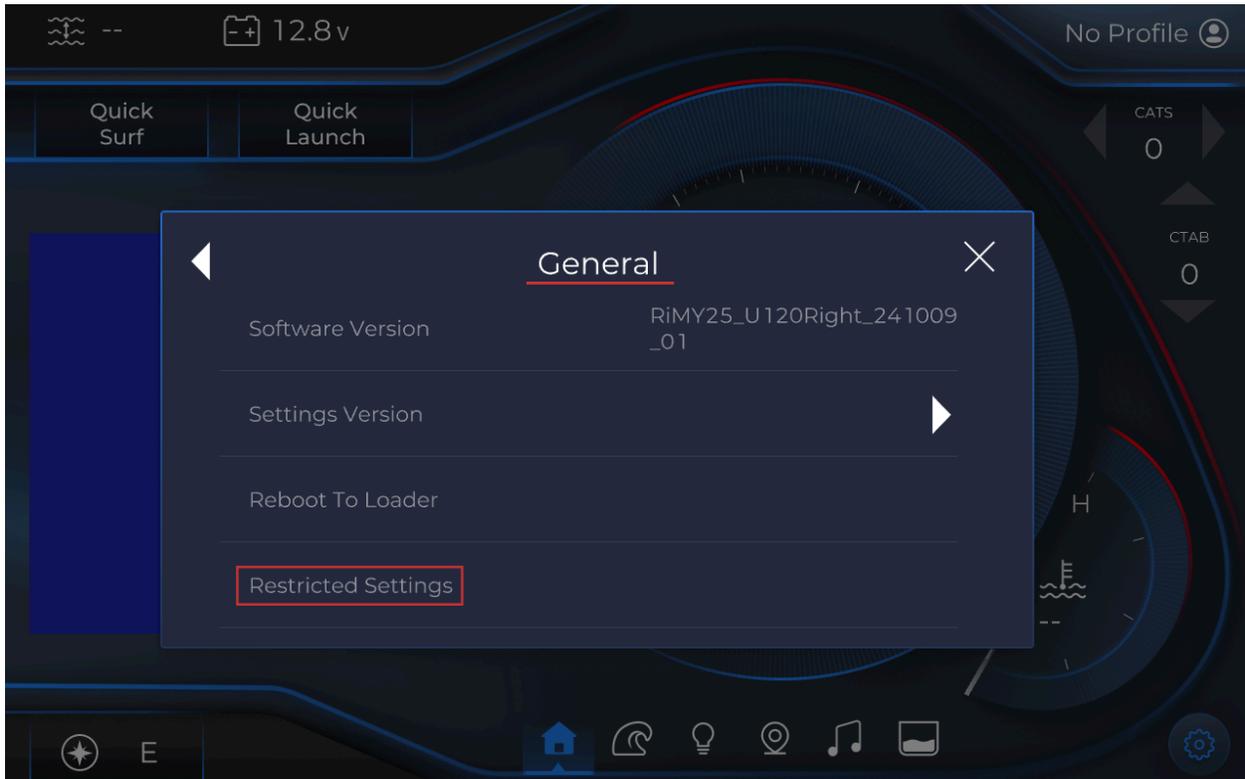

- From the main right display, in the bottom right-hand corner, tap the Settings icon.
- In the Settings pop-up window, tap General.
- Simultaneously touch and scroll up to locate the Restricted Settings option.

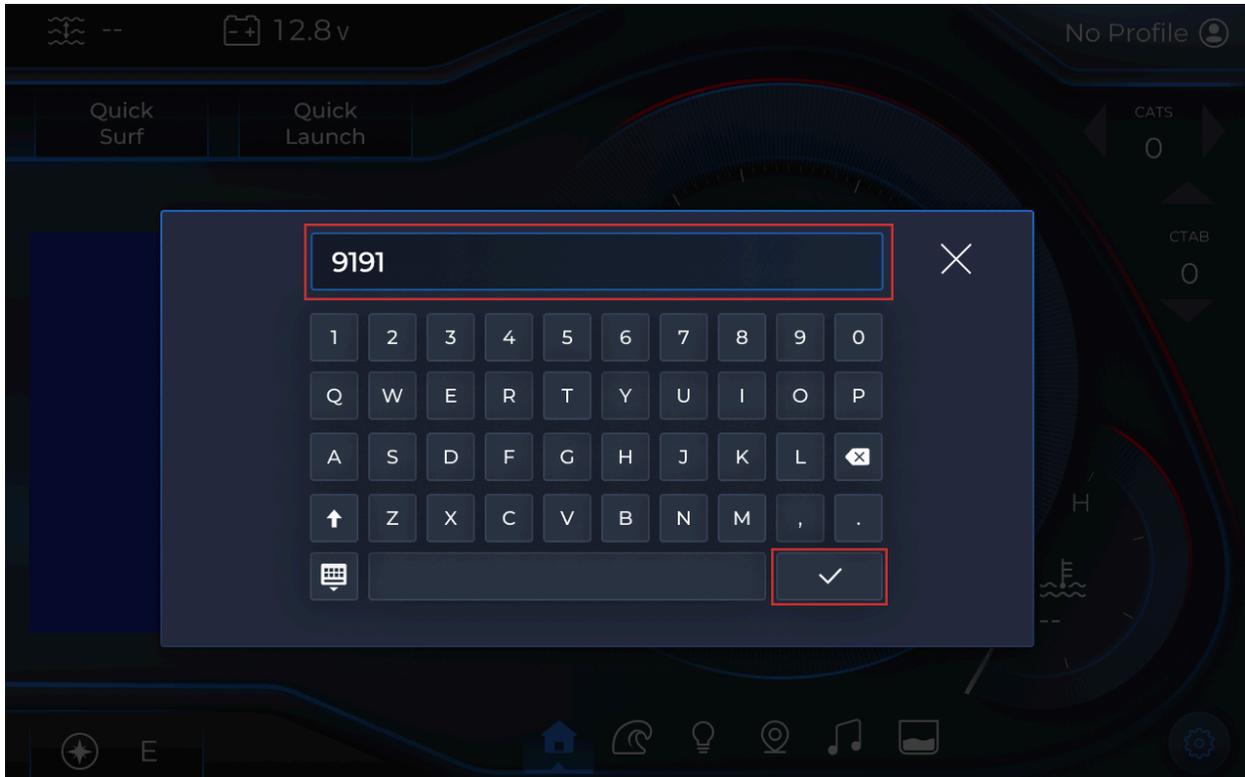

- In the pop-up dialog box, enter the appropriate passcode.
- Tap the Enter (checkmark) icon.
 - Note: Once the passcode is submitted, the Settings pop-up window automatically re-displays.
- The Dealer options are now accessible
- In the Settings pop-up window, tap General.
- Simultaneously touch and scroll up to locate the Dealer Options feature.
- Tap Dealer Options.
- 4 Dealer Options are displayed:
 - Installation Options
 - Tap Installation Options.
 - Toggle on/off the appropriate features:
 - RGBW
 - Heater
 - Seat Heater
 - Underwater Lights
 - Interior Lights
 - Exterior Lights
 - CATS
 - Bow Ballast
 - Transform Ballast
 - Starboard Ballast
 - Port Ballast
 - Port Ramfill

- To revert to the Dealer Options page, in the left-hand corner, tap the Back (left arrow) icon.
 - Boat Model
 - Tap Boat Model.
 - 3 options are displayed:
 - Ri230
 - Ri240
 - Ri265
 - Tap the appropriate option.
 - To revert to the Dealer Options page, in the left-hand corner, tap the Back (left arrow) icon.
 - Boat Scheme
 - Tap Boat Scheme.
 - 4 options are displayed:
 - Core
 - Warrior
 - Drive
 - Slice
 - Tap the appropriate option.
 - To revert to the Dealer Options page, in the left-hand corner, tap the Back (left arrow) icon.
 - Customization
 - Tap Customization.
 - Note: This feature is for boat colorization.
 - 4 options are displayed:
 - Hull Base
 - Hull Main Front
 - Hull Accent
 - Upholstery
 - Deck
 - Tower
 - Trim
 - Tap the appropriate option.
 - Tap the appropriate color.
 - To revert to the Dealer Options page, in the left-hand corner, tap the Back (left arrow) icon.

Wake Feature: Ballast Fill and Drain Times


- Note: The Wake feature is only active if the Dealer Settings are enabled.
- Refer to the [Dealer Settings](#) section, to activate the dealer features.
- From the main right display, in the bottom right-hand corner, tap the Settings icon.
- Simultaneously touch and scroll up to locate the Wake option.
- Tap Wake.
- All (5) ballasts are displayed:

- Port Ballast
- Starboard Ballast
- Center Ballast
- Bow Ballast
- Transom Ballast
- Locate and tap the appropriate ballast.
- In the respective ballast window, there are 3 options:
 - Enabled/Disabled toggle button
 - Tap the toggle button to the appropriate option.
 - Ballast Empty time
 - Tap the corresponding time.
 - Adjacent decrease and increase buttons are now displayed.
 - Note: The buttons apply 10-second increments.
 - Set the appropriate time.
 - Ballast Fill Time
 - Tap the corresponding time.
 - Adjacent decrease and increase buttons are now displayed.
 - Note: The buttons apply 10-second increments.
 - Set the appropriate time.
- To revert to the Wake page, in the left-hand corner, tap the Back (left arrow) icon.
- Locate and tap the appropriate ballast.
- Repeat the previous steps.
- When finished, tap the Close icon.


Wet Sounds Updater

- Note: The Wet Sounds Updater is only active if the Dealer Settings are enabled.
- Refer to the [Dealer Settings](#) section, to activate the dealer features.
- Note: Ensure the appropriate USB with updates is plugged into BB-10.
- From the main right display, in the bottom right-hand corner, tap the Settings icon.
- In the Settings pop-up window, tap Audio.
- Tap Update Wet Sounds Software.
- Tap Search for Update Files.
- Note: On the right-hand side 3 horizontal dots will sequentially re-display until the files load.
- The updated files are now displayed.


Theme Color

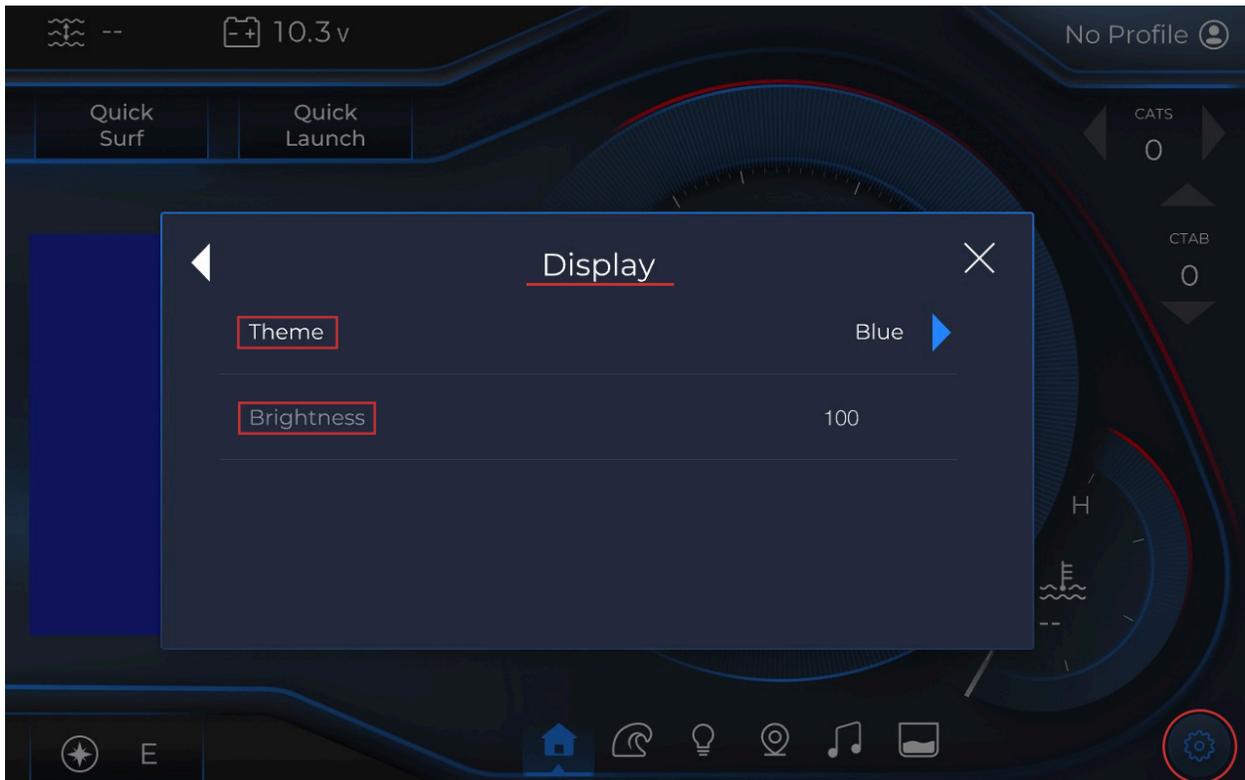


- From the main right display, in the bottom right-hand corner, tap the Settings icon.
- In the Settings pop-up window, tap Display.
- 2 Display options are shown:
 - Theme

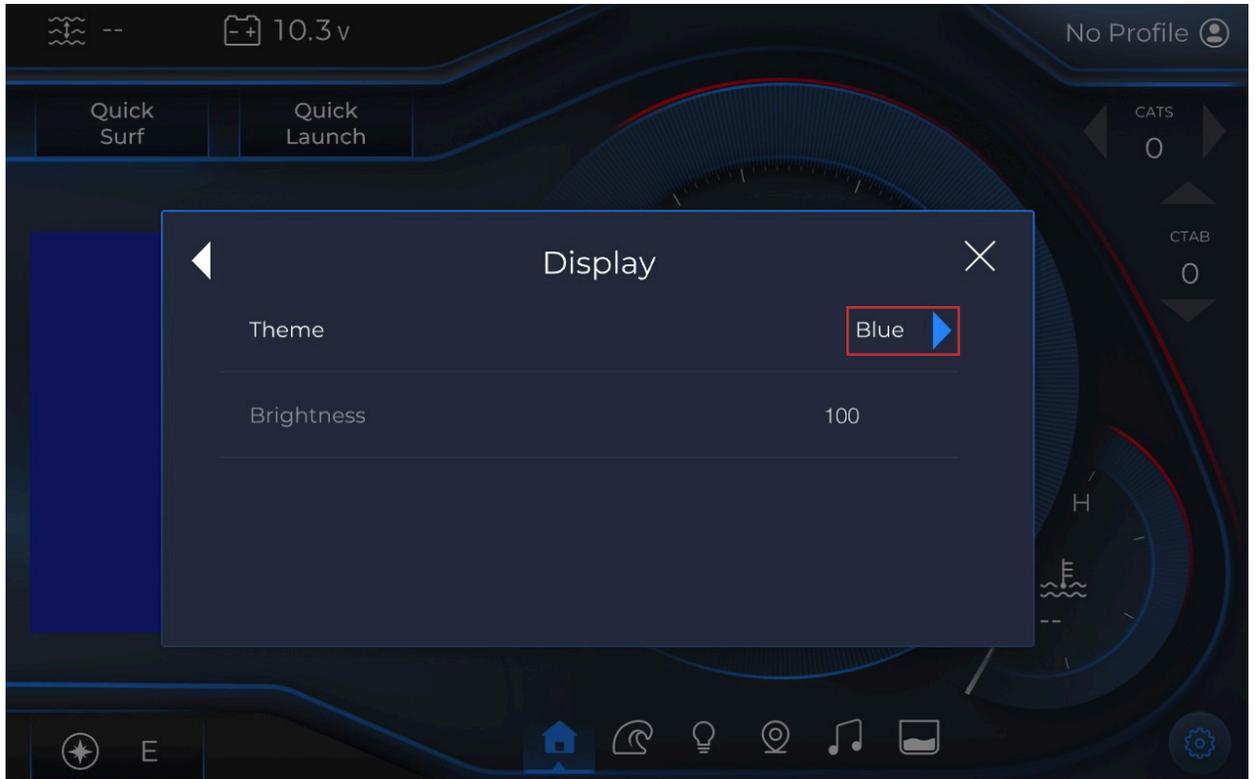

- Tap the respective color.
- Locate and tap the appropriate color.
- Note: Default and custom colors options are provided.
- Tap the appropriate default color.
- Alternatively, to select a custom color, locate and tap the appropriate custom color.

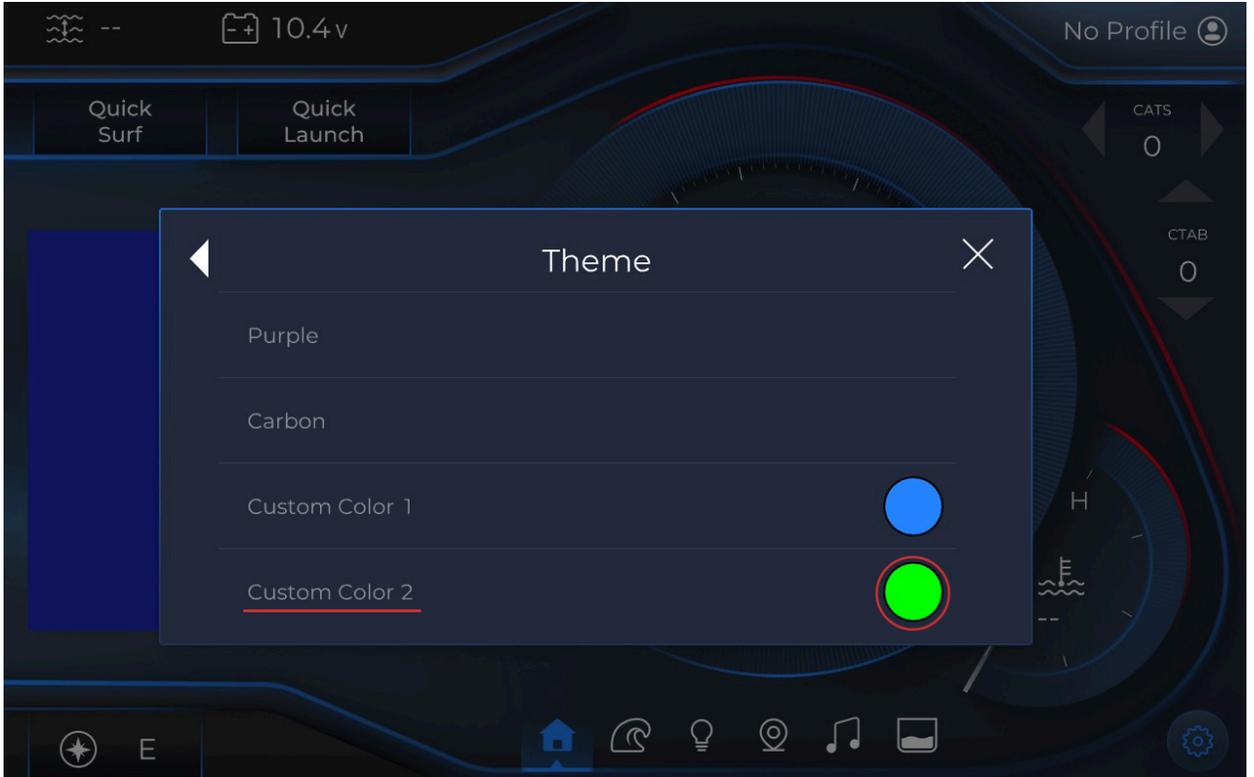


- The Theme Selection pop-up window is displayed.

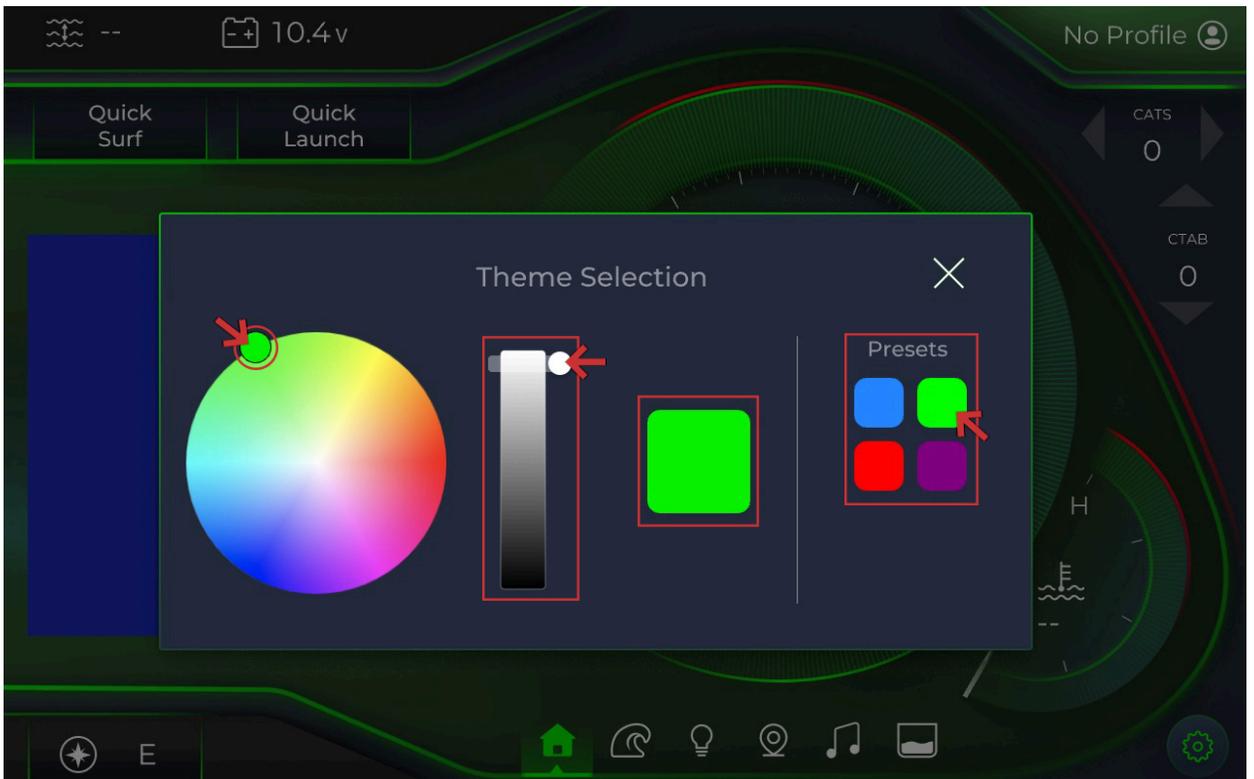

- To quickly apply a color, locate the 4 preset color options.
- Tap the appropriate color.

- The color is now applied.
- Alternatively, to apply a custom color, simultaneously touch and slide the circle on the color wheel to the appropriate color.
- To adjust the brightness, simultaneously touch and slide the brightness slider to the appropriate setting.
- The color is reflected in the adjacent square.
- To save the customized color as a preset, locate the Presets area.
- Touch and hold on the appropriate preset.
- The selected preset is now updated.
- When finished, tap the Close icon.


○ Brightness

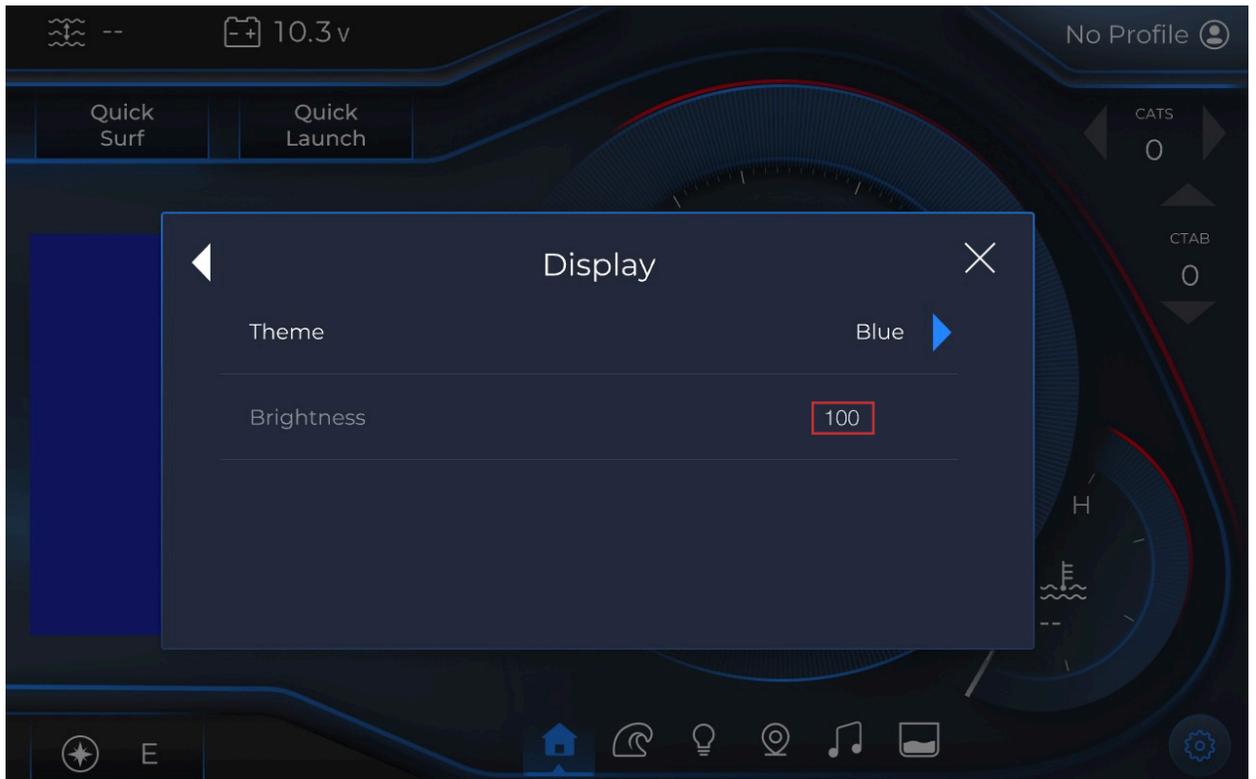


- Tap the respective number.
- Set the appropriate value.





Left Display


Home Screen

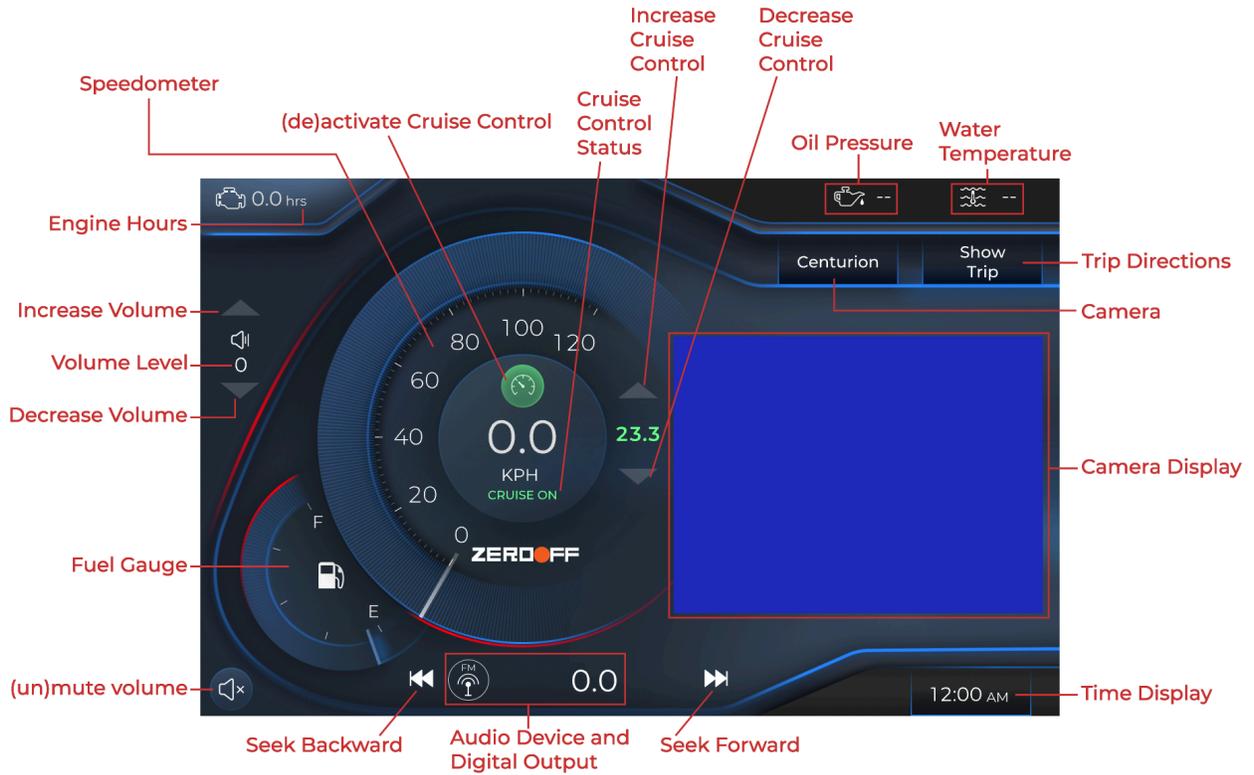

Tab Controls

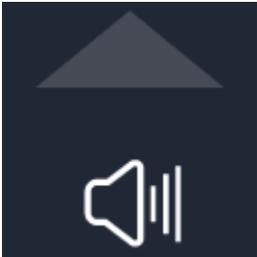
ICON	DESCRIPTION
	<p>Tap to increase the volume</p>

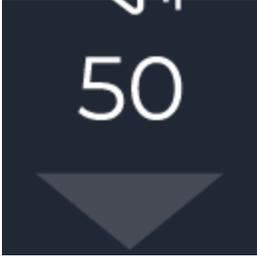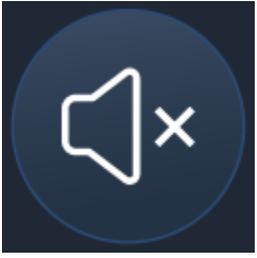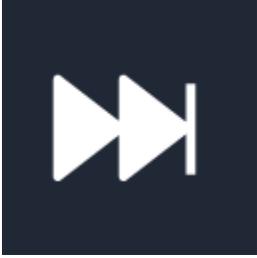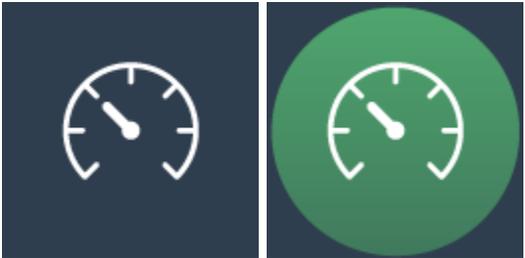	Tap to decrease the volume
	Toggle to (un)mute the volume.
	Tap to Seek forward.
	Tap to Seek backward.
	Toggle to (de)active cruise control.

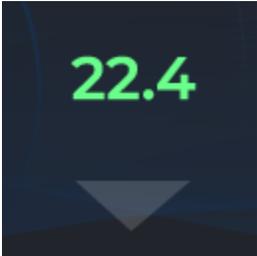
 <p>A dark blue square icon with a light blue upward-pointing triangle at the top and the number '22.4' in green in the center.</p>	<p>Tap to increase the cruise control speed.</p>
 <p>A dark blue square icon with a light blue downward-pointing triangle at the bottom and the number '22.4' in green in the center.</p>	<p>Tap to decrease the cruise control speed.</p>

Gauges


<p>ICON</p>	<p>DESCRIPTION</p>
 <p>A digital speedometer gauge with a blue background. The outer ring shows speed in KPH with markings at 0, 20, 40, 60, 80, 100, and 120. The center displays '0.0' in white, with 'KPH' and 'CRUISE OFF' below it. A needle is visible at the 0 mark. The 'ZERO OFF' logo is at the bottom. A fuel gauge icon is partially visible on the left.</p>	<p>Analog + digital speed (MPH).</p>

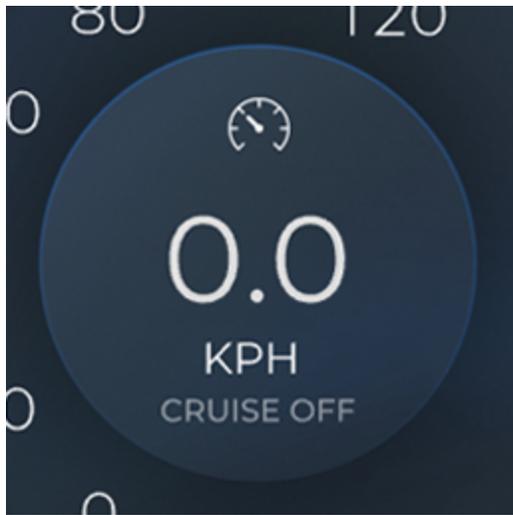


Cruise control status OFF.

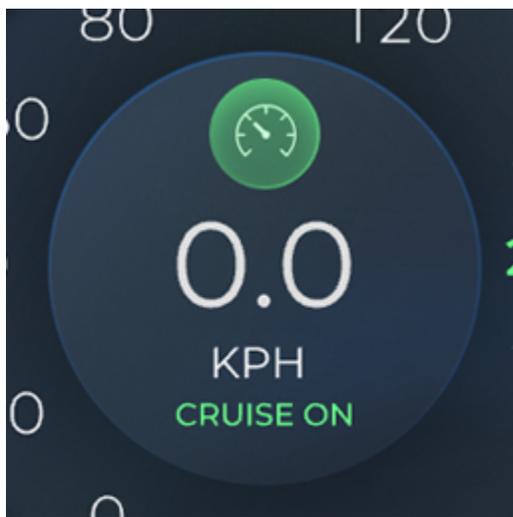


Cruise control status ON.

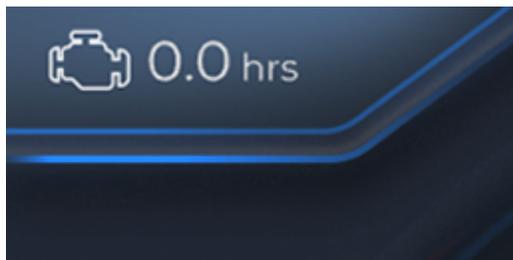


Engine hours

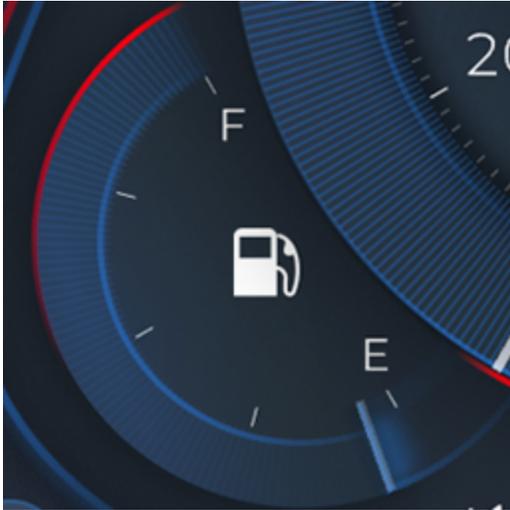


Fuel

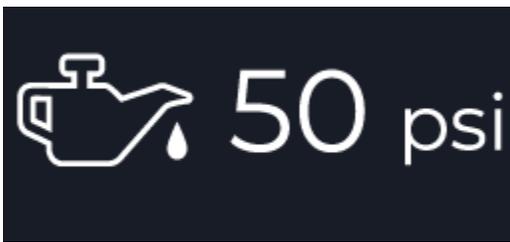


Oil pressure

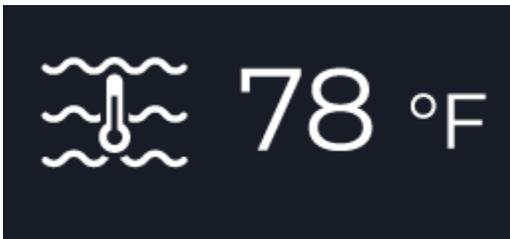

Water temperature


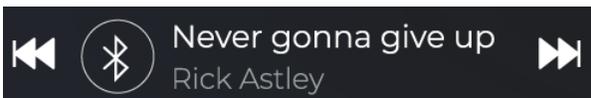


The selected audio device and digital output.

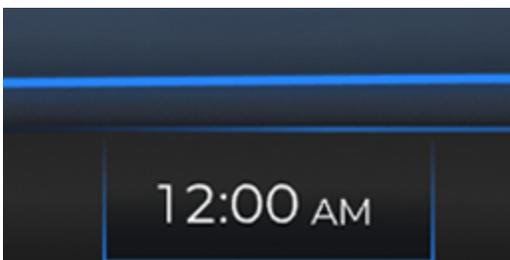

The time display.

Top Buttons

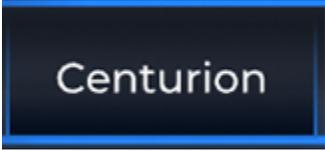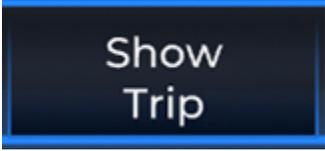ICON	DESCRIPTION
	A non-functional button for the camera display.
	The Show Trip option displays the trip information.

Cruise



- To (de)activate the cruise control feature (un)tap the Cruise Control icon.

- Note: The Cruise Off/On text will reflect according to the applied setting.
- Note: Activating Cruise Control will populate the Cruise Control speed options.
- In the right-adjacent area, locate the corresponding Cruise Control speed options.
- Tap the Up arrow to increase the speed.
- Tap the Down arrow to decrease the speed.
- The applied speed setting is reflected in the digital value.

Show Trip Information



- From the Cruise Control display, tap the Show Trip tab.
- Note: Once this feature is active, it will replace the Camera display.
- The trip information is displayed:
 - Trip Time
 - Fuel Average
 - Fuel Used
 - Trip Distance
 - Fuel Rate
- To reset the trip information, tap Reset.
- To close the Trip Information window, retap the Show Trip tab.
- The Camera display is reactivated.

Audio Controls



- On the bottom of the screen, the selected source is displayed along with its corresponding features.
- Muting and decreasing/increasing the volume is displayed on the left side of the display.